

How to control the audio & video equipment (TV, DVD, CD and radio) in the Romantic apartment before it controls you?

The master switch is the thin rectangular (Bang & Olufsen) remote control. First select the apparatus that you want (TV, DVD, CD or radio).

Watch out! Switching may cause deafness, because some equipment requires setting the volume to 40 or louder, but this is often too loud for other applications. Better make sure you set the volume to a decent 35 before you change anything.

Volume for all equipment

The up and down arrows at the bottom of the same **thin rectangular** remote control determine the volume. The volume chosen is visible from the miniature display above the TV screen.

The arrows around the "go" button determine the chosen program or track, and this is often also visible from the miniature display above the TV screen.

CD and Radio

Work as usual, and switch between CD tracks and radio programs with the number keys or arrows (around "go") of the same **thin rectangular** remote control. The CD player opens by pushing the doors slightly (or coming near to them); they close automatically.

TV

Note that the TV works via the black box (decoder from the TV-cable company) next to the TV screen. There is in fact only one channel (11) that works on the TV itself, and the rest is controlled by the black box.

Change between channels via the **larger black remote control**, and the chosen channels are visible from the display on the black box.

Make sure there is no DVD in the (silver) DVD player, as this prevents the TV to take control of the system!

DVD

Put a DVD in the silver DVD player, by pushing the appropriate button on the player itself (just on the right of the DVD door).

Use the menu via the **smaller black remote control**.

Remove the DVD from the silver player if you want to use the TV.

Now you can enjoy...